

JEEP JK MOLLE DOOR PANEL FRONT AND REAR INSTALLATION INSTRUCTIONS

Get ready to say goodbye to those ugly, sagging door nets!



Tools Needed

- Utility knife or scissors
- T30 Torx Drive



Removal of Door Net

Please note: Door net can be left in if you do not want to remove it. By removing it, you will have extra storage space.

Hold door net tightly. While doing so, cut the net as close to the factory door panel as possible.




Removal of Screws Holding Door Strap Bracket

Using a T30 Torx Driver remove the two screws. These screws will be used to mount your GhostFire Industries, LLC Molle door panel.



Install the GhostFire Industries Molle Door Panel

Slide the tabs on the back of the panel into the door net groove.

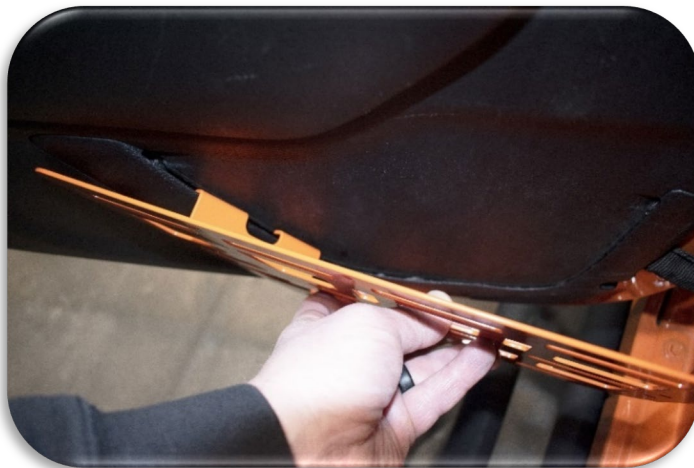

Align the two holes in the GhostFire Industries Molle door panel with the two holes that are used for mounting the door strap bracket.



Reinstall the two screws through the door strap bracket and GhostFire Molle door panel. Hand tighten both screws.



The installation of your GhostFire Molle door panel is complete! Don't forget to let us know how YOU use your panels!

